

DSC1550 – 6 ZONE ALARM SYSTEM QUICK SHEET

- To BYPASS ZONES: * 1 (zone to bypass) # (bypass light on) temporary only & has to be redone every time system is armed.
 - To CHANGE MASTER CODE: *5 master code user number 1 new code (4 digits)#
 - To CHANGE/ADD AUX CODE: * 5 master code user number 1 new code(4 digits)#
 - DOOR CHIME: * 6 master code 6 #
 - To READ MEMORY: * 3 check zone number/s #
 - To READ TROUBLE : press * 2
 - Zone 1 light on = low battery
 - Zone 2 light on = mains power problem
 - Zone 3 light on = fuse fail
 - Zone 4 light on = fail to communicate
 - Zone 5 light on = fire circuit problem
 - Zone 6 light on = system clock
- Press # to finish
- SYSTEM CLOCK: To reset * 6 master code 1 (24 hour time)